

FELICITA[®] SQUARE

USER MANUAL

600 ml Pour Over Electric Kettle



IMPORTANT SAFEGUARDS

When using electrical kettle, basic safety precautions should always be followed including the following:

- Read all instructions before using the kettle for the first time.
- Do not use the kettle for other than intended use.
- The kettle is intended to heat water only. Using it for any other liquids may damage the appliance.
- Only carry the kettle using the handle. The surfaces of the kettle are hot and can cause burns.
- Do not use the kettle if the power cord, plug or the kettle is damaged.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Only use accessories that were provided by the manufacturer.
- Do not use the kettle outdoors.
- Do not fill the kettle above the MAX line.
- The Electric kettle must be operated on a flat surface. Do not place on an inclined plane.
- Keep the kettle and cable away from heat sources and surfaces.
- Do not place the kettle in water or any other liquid.
- Do not plug in or operate the kettle with wet hands. If the kettle does get wet, unplug it immediately.
- Ensure that the kettle is switched off before removing from its stand.
- Do not leave the kettle unattended when use. Keep out of reach of children.
- Do not remove the lid while water is boiling.
- Before cleaning, ensure the appliance is unplugged from the power socket and allow to cool.
- If the supply cord is damaged, it must be replaced by the manufacturer, or an authorized service station in order to avoid danger.

SAVE THESE INSTRUCTIONS

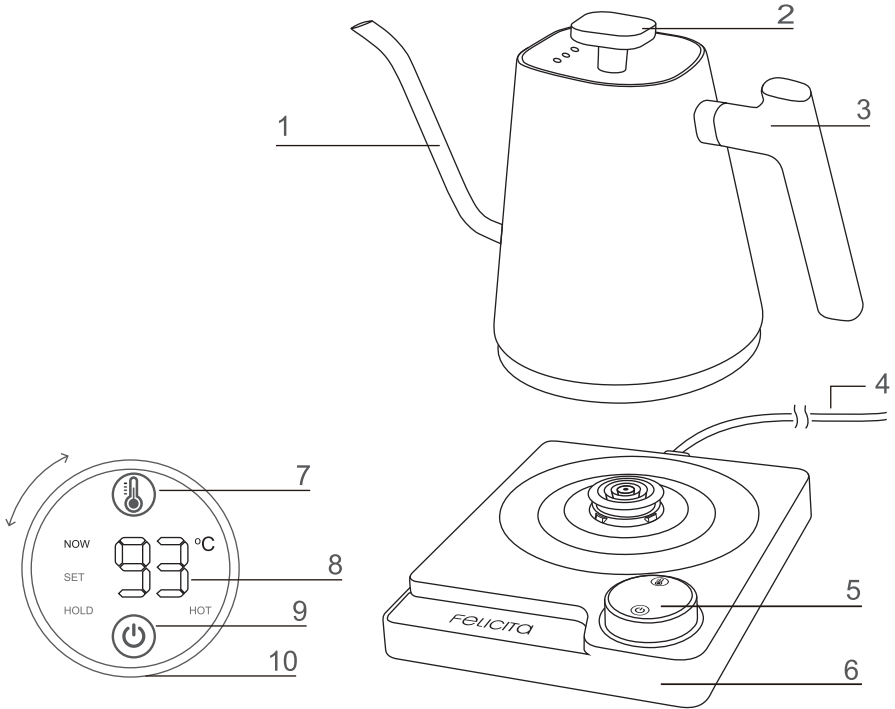 


Table of Contents

Cover	1
IMPORTANT SAFEGUARDS	2
Table of Contents	3
Kettle Components	4
Operation Illustrations	5
Operation Instructions	6
• Setting Up the Kettle	6
• Preparing the Kettle for First Time Use	6
• Selecting the Temperature Display, Fahrenheit or Celsius	6
• Setting the Temperature	6
- Suggested Temperature Chart	6
- Manual Boiling	6
- Selecting a Preset Desired temperature	6
• Setting the Keep Warm Function	7
• Audible Beeping Sounds	7
• Maintenance and Cleaning	7
• Storage	7
• High Altitude Users	8
• Warnings and Technical Data	8
1-year Limited Warranty Information	9



 
 
 
 
 
 
 
 
 
 
 
Kettle Components



- 1** Spout
- 2** Lid
- 3** Handle
- 4** Power cord with plug
- 5** Main Button
- 6** Base
- 7** Temperature setting button
- 8** LED display
- 9** On/Off/pause button
- 10** Temperature control



Operation Illustrations

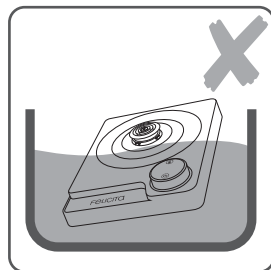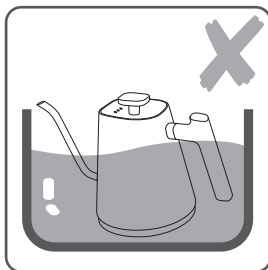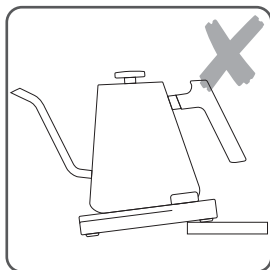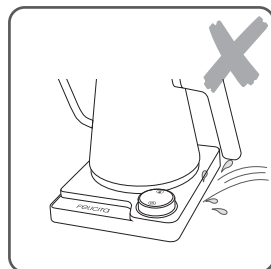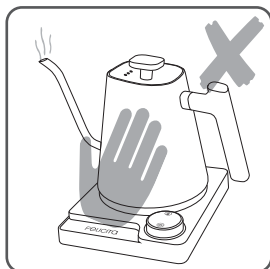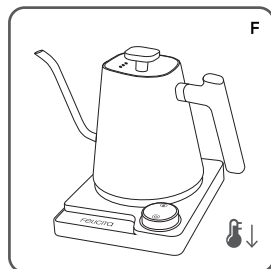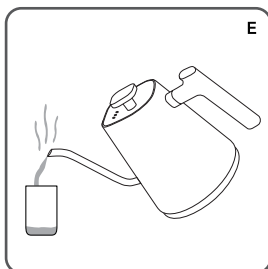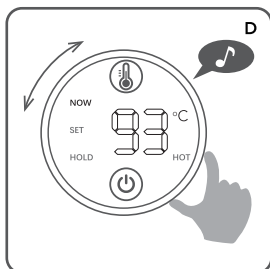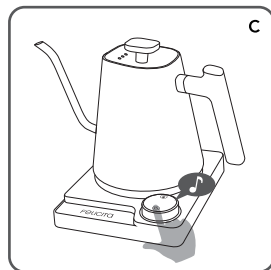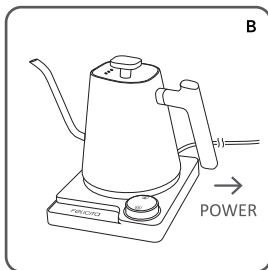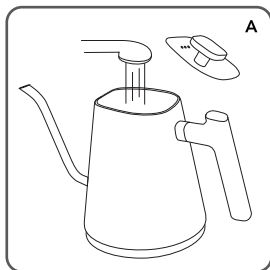

Notification BEFORE USE:

To reduce the risk of fire, electrical shock, personal injury, or damage when using the kettle, follow basic safety precautions.




Operation Instructions



1 Setting up the kettle:

- Set the base on a flat surface.
- Remove the kettle from the base.
- Remove lid and fill the kettle to THE MAXIMUM FILL LINE with water(A).
- Ensure the lid is closed by pushing it down until it locks in place.
- Place the kettle onto the base and plug the cord into a power socket(B).

2 Preparing for the First Time Use

- Fill the kettle to the 0.8L MAX line with cold water.
- Press  button to begin heating cycle(C).
- After boiling is finished, empty the kettle.
- Allow the kettle to cool down for 1 minute.
- Repeat. This will clean the kettle and prepare it for future use.

3 Selecting the Temperature Display, Fahrenheit or Celsius:

- Default display Celsius($^{\circ}$ C). Press  button to turn on the kettle, **DO NOT PUT THE KETTLE ON THE BASE**, press  button for 3seconds until one beep sounds, then the temperature will change to display Fahrenheit($^{\circ}$ F).




4 Setting the Temperature:


• Suggested Temperature Chart:

Green Tea	80 $^{\circ}$ C (175 $^{\circ}$ F)	Cocoa	88 $^{\circ}$ C (190 $^{\circ}$ F)
Oolong Tea	88 $^{\circ}$ C (190 $^{\circ}$ F)	Hot Cereal	91 $^{\circ}$ C (195 $^{\circ}$ F)
Black Tea	98 $^{\circ}$ C (208 $^{\circ}$ F)	Coffee	93 $^{\circ}$ C (200 $^{\circ}$ F)

• Manual Boiling:

- When the base is powered on, one beep will sound. Auto-off in 30 minutes without any operation.
- Press  button to turn on the kettle, the current temperature inside the kettle will display immediately. "SET" will flash. Meanwhile with no operation, the kettle will automatically detect the water temperature then within 3 seconds start to heat up to the last set temperature or the default 80 $^{\circ}$ C . "HOT" on.
- When heated to the set temperature, one beep will sound.


TIPS

The kettle will detect the water temperature automatically, if temperature lower than set, the kettle will not heat. Before turning the kettle off, heating should be stopped. Press  to pause/stop, press again to turn it off.






Operation Instructions

• Selecting a Desired Temperature:


Turn on the kettle, then turn  (Temperature Control) clockwise or anticlockwise to change the temperature precisely(D). “SET” will flash. The kettle will start to heat in 3 seconds after temperature set.



5 Setting the Keep Warm Function

- Turn  (Temperature Control) to set the temperature precisely.
- Press  for 2seconds to activate the Keep Warm Function, the kettle will start to heat within 3seconds.
- When the Keep Warm Function is activated, “HOLD” on and last for 30mins.
- When the water temperature is 2°C lower, the kettle will start to heat again.
- To deactivate the function, press  button and “HOLD” off.

6 Audiable Beeping Sounds

- When the  button is pressed, one beep will be heard.
- When the boiling is finished, a long beeping sound will be heard.

7 Maintenance and Cleaning:

- Always switch off and unplug the kettle from the power outlet before cleaning.
- Make sure the kettle has cooled down if recently in use.
- Clean the inside of the kettle by hand with mild detergent and rinse thoroughly until water runs clean.
- Clean the outside of the kettle and base with a damp cloth.
- Dry by hand with a soft dry towel.



CAUTION

Never fully submerge your kettle or base in water. Also, to prevent damage, avoid using alkaline cleaning agents and metal scourers when cleaning, use mild detergents and a soft cloth.

8 Storage:

- Clean and dry all parts before storing.
- Store the kettle in its box or in a clean, dry place.
- Never wrap the power cord around the kettle.

High Altitude Users

At higher elevations water boils at lower temperatures. Use the chart below to determine your kettle's boiling temperature.

ELEVATION m(ft)		TEMPERATURE °C(°F)	
0 m	0 ft	100 °C	212 °F
150 m	500 ft	99.5 °C	211.1 °F
305 m	1,000 ft	99 °C	210.2 °F
610 m	2,000 ft	98 °C	208.4 °F
1524 m	5,000 ft	95 °C	203 °F
1829 m	6,000 ft	94 °C	201.1 °F
2438 m	8,000 ft	91.9 °C	197.4 °F
3048 m	10,000 ft	89.8 °C	193.6 °F
3658 m	12,000 ft	87.6 °C	189.8 °F
4267 m	14,000 ft	85.5 °C	185.9 °F



- The appliance is very hot during use. Do not touch the surface of the kettle. Danger of burns!
- Never leave the kettle unattended while boiling water, especially if there are children nearby.
- Do not open the lid while boiling water.
- Do not immerse the base or the kettle in water or any other liquid. This may cause electric shock or damage the kettle.
- Be careful when handling hot water. Danger of scalding!

TECHNICAL DATA

For countries with voltage

ranging from 110-127V

Rated voltage: 120 V ~60 Hz

Rated current: 10A

Rated power input: 900-1100W

Capacity: Max 600ml

For countries with voltage

ranging from 220-240V

Rated voltage: 220-240 V ~50/60 Hz

Rated power input: 1000-1200W

Capacity: Max 600ml



LIMITED WARRANTY

1-Year Limited Warranty

About warranty issues : Please contact your original place of purchase or your local distributor. Products that are purchased in every country have a one year warranty of parts only. If your product fails within one year date of purchase, simply email us at support@Felicita.com. Please have the following information prior to contacting FELICITA:

1) Proof of date of purchase.

2) Model and serial number (located on bottom of the product) FELICITA will contact you determine the problem, and see if it can be fixed quickly and easily.

The customer is responsible for paying the freight charges and any duties for replacement parts that FELICITA may send. Customer is also responsible to provide any labor required to repair the product.

The high quality workmanship of FELICITA products bearing the FELICITA trademark is guaranteed by: FELICITA CO., LIMITED

For complete user manual , please visit  www.felicitacoffee.com

FELICITA[®]
SQUARE