




X10c (EA/SA/INTA) / **X4c** (EA/SA/INTA)

Installation guideline for permanent water connection

i In order to enable the X10c/X4c to be installed properly on site, some preparations are necessary **on site**. The following preparations must be carried out **professionally** (in accordance with European standard EN 1717). Therefore, please give this document to your installer.

Overview: On-site requirements and installation instructions

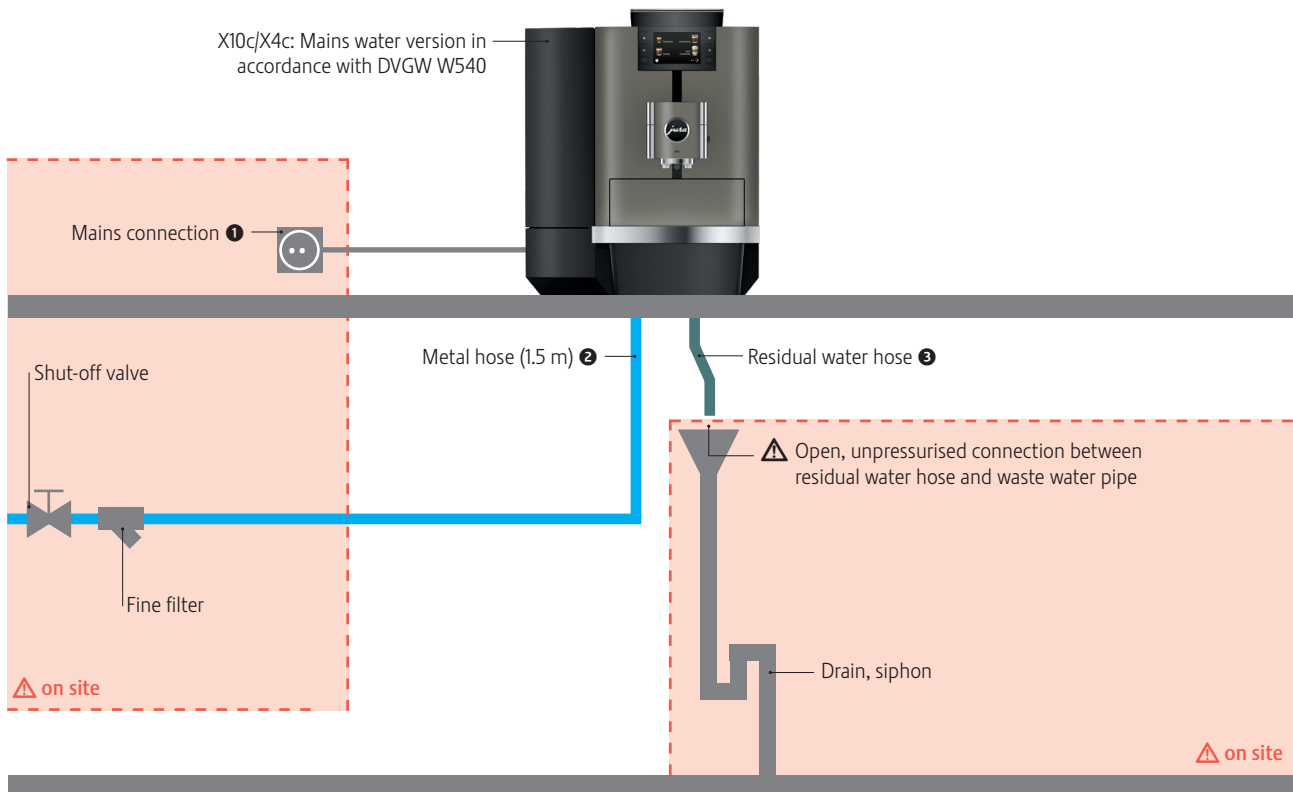

Mains connection

- ①
 - The mains connection must be protected by a residual current device (RCD).
 - It must be possible to interrupt the power supply using a main switch.

On-site permanent water connection (external thread G 3/8")

- ②
 - Must have a stopcock and filter
 - Water pressure from local network: max. 10 bar

Residual water hose and drain

- ③
 - Use of the residual water hose supplied is expressly recommended!
 - The hose should be installed as short as possible and with the maximum possible inclination (in the fall line).
 - During installation, avoid a counter-inclination of the hose or the formation of a siphon in the residual water hose.
 - It must be possible to ventilate and evacuate air from the hose. This is achieved by an open, unpressurised connection between the residual water hose and the waste water pipe.
 - There should be a siphon in the waste water pipe installed on site.

Installation of permanent water connection

Fitting the residual water hose

- ▶ Remove the drip tray.
- ▶ Carefully lay the X10c/X4c on its side.
- ▶ Press the residual water hose into the recess on the underside of the appliance. The two clips (○) engage audibly.




- ▶ Stand the X10c/X4c up again.

Prepare and connect the metal hose

- i** Depending on the nature of the installation site, the metal hose can be used in both directions. In the following example, the straight end is fitted to the X10c/X4c.


- ▶ Insert the blue sealing ring.

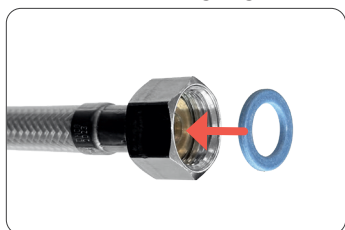

- ▶ Remove the yellow protective cap from the permanent water connection of the X10c/X4c.
- ▶ Screw the hose onto the permanent water connection. CAUTION! Do not overtighten the thread.



- ▶ Insert the filter.

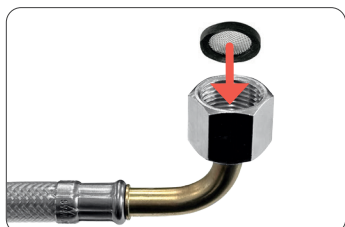

- ▶ Screw the hose onto the on-site permanent water connection.